


New Masonry Construction Installation Instructions

**READ AND FOLLOW
INSTRUCTIONS CAREFULLY.**
Incorrect installation or adjustment
could cause damage or injury.

FOR STANDARD FRAMES



A hollow metal frame must be installed plumb, square and free from rack and twist. Secure bracing is required during installation. An improper installation will affect the performance of the door frame.

FRAME INSTALLATION TOLERANCES

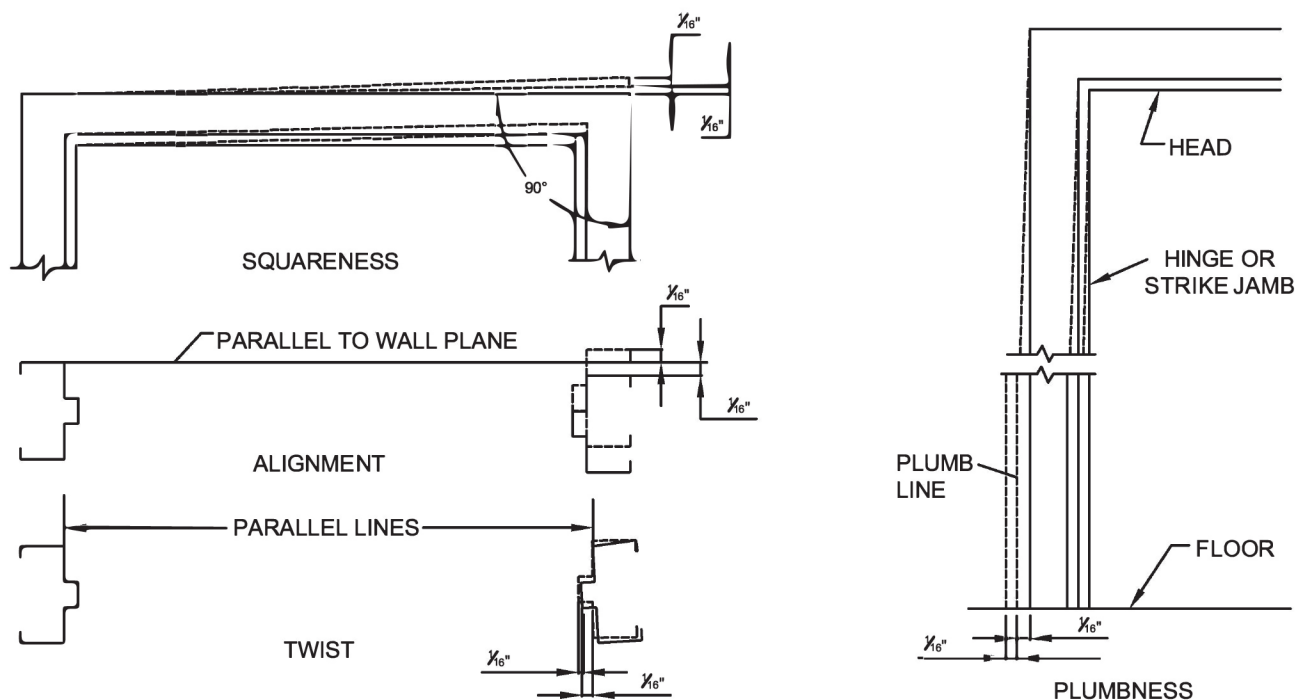





ASSEMBLY OF KNOCK DOWN FRAMES

Place the head so that the 4 tongues on jamb engage corresponding slots in head.

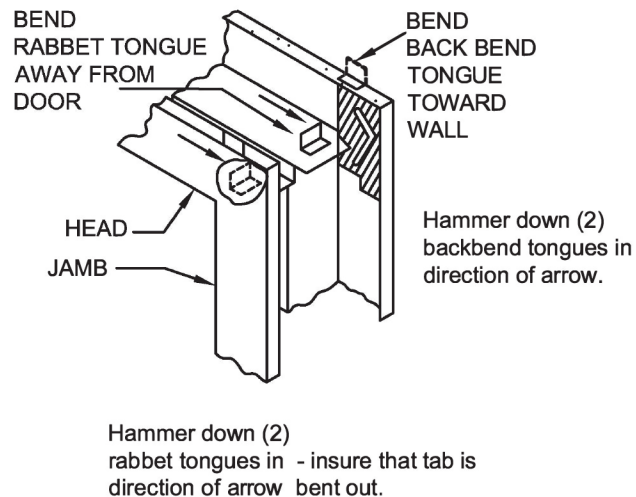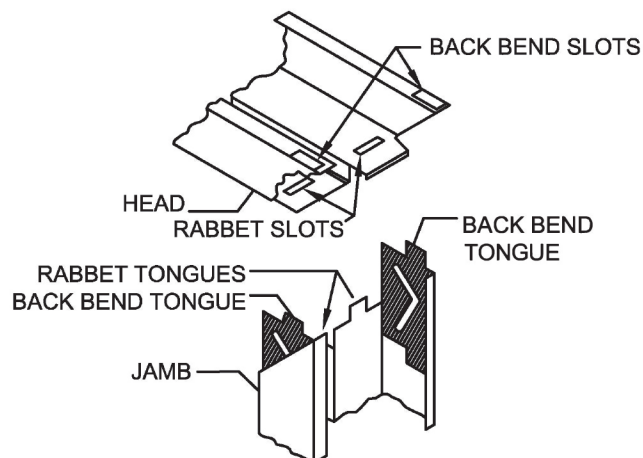

New Masonry Construction Installation Instructions

**READ AND FOLLOW
INSTRUCTIONS CAREFULLY.**
Incorrect installation or adjustment
could cause damage or injury.

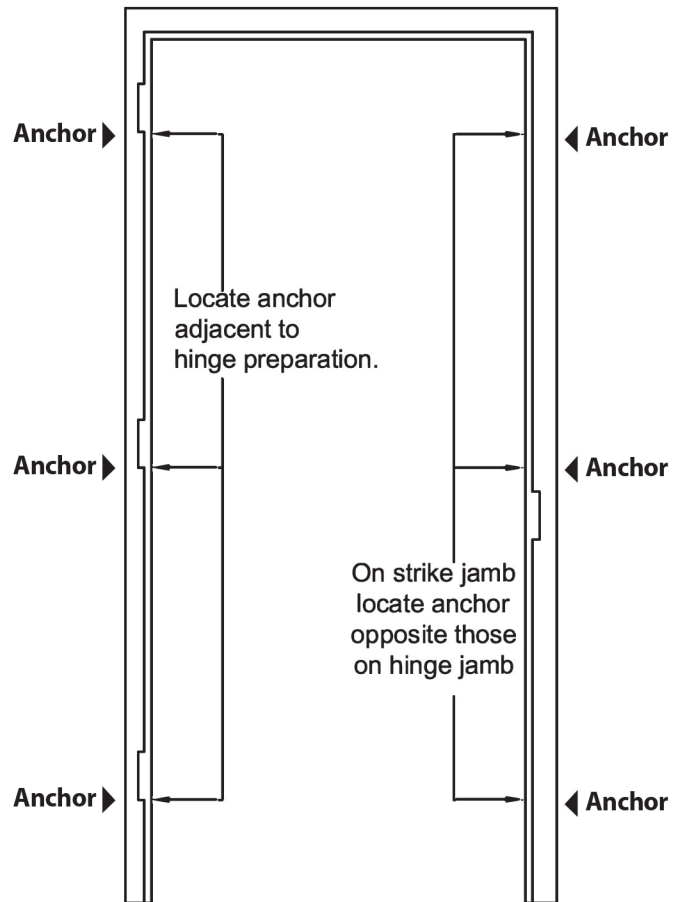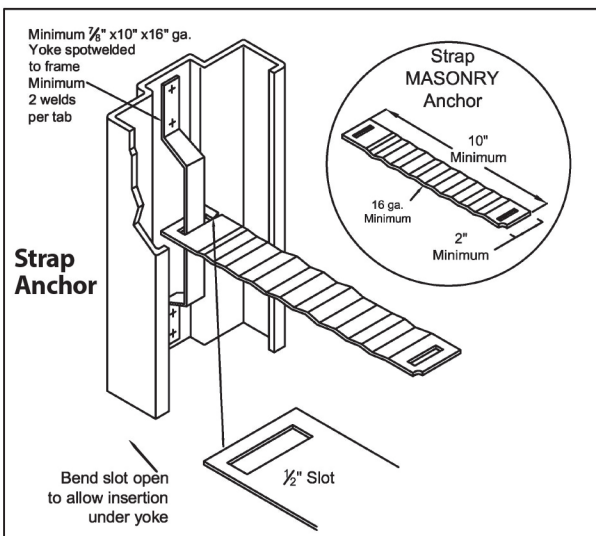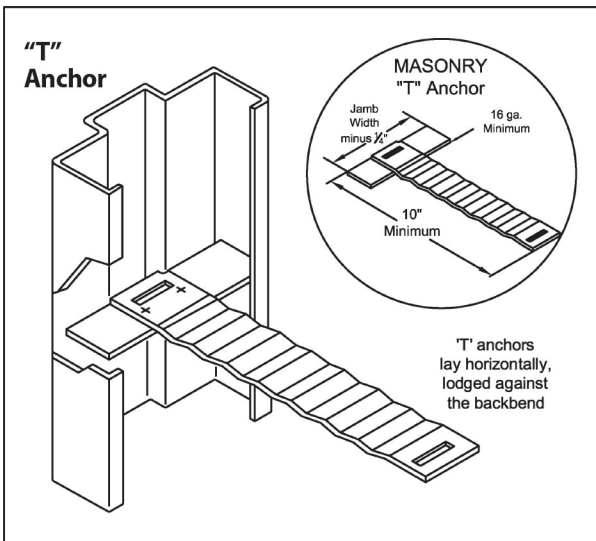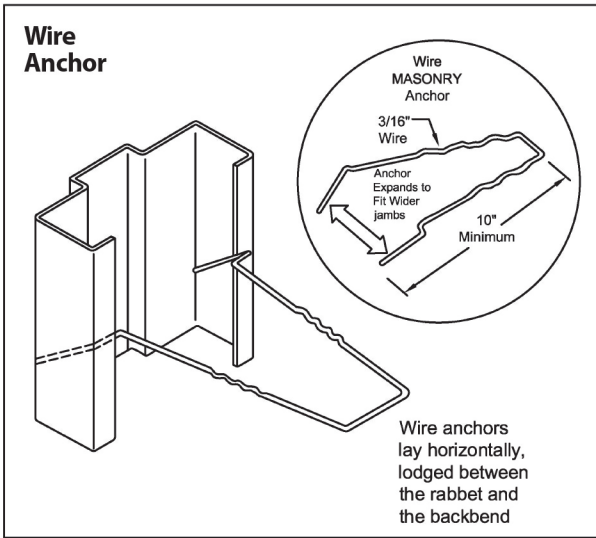


You will have been furnished with one (or more) of the illustrated types of loose masonry wall anchors necessary for the installation of the UL listed Fire Door Frame provided on this job.

The frame must be accurately set and solidly anchored to the wall and grouted. An anchor must be used for each 30 inches of jamb height or fraction thereof. On the hinge jamb, each anchor must be located immediately above or below each hinge reinforcement. On the strike jamb anchors must be located directly opposite the anchors on the hinge jamb. Refer to N.F.P.A. Pamphlet #80 or U.L.63

New Masonry Construction Installation Instructions


**READ AND FOLLOW
INSTRUCTIONS CAREFULLY.**
Incorrect installation or adjustment
could cause damage or injury.

You will have been furnished an appropriate amount of one type of masonry wall anchors.

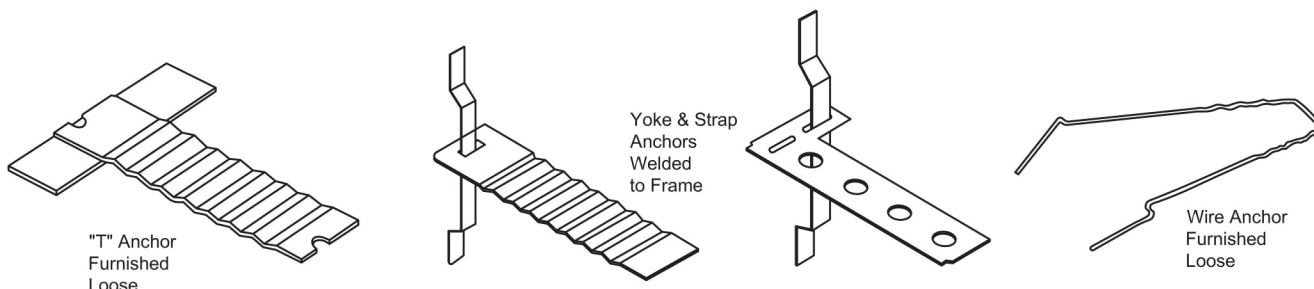


Care should be taken to insure the frame is absolutely plumb and square.
An improper frame installation will effect the performance of the opening.


1

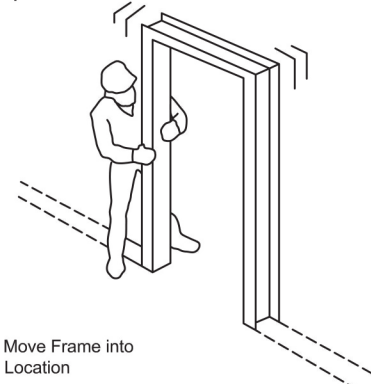


2

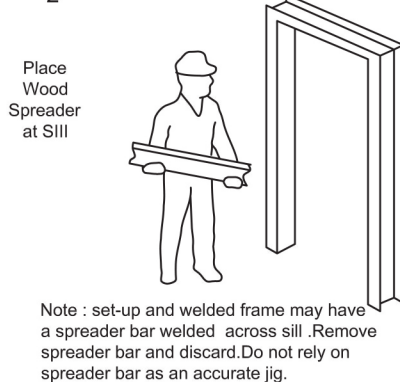


3

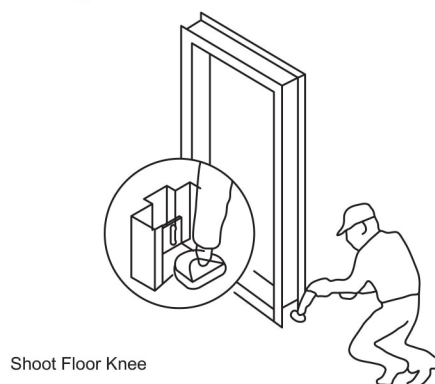


4

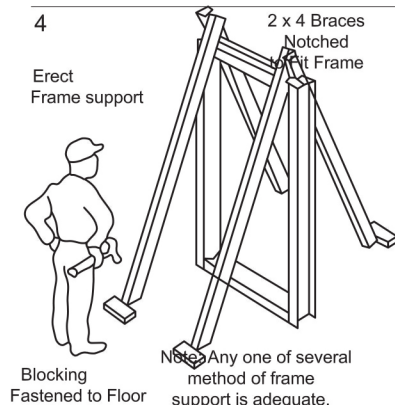


5

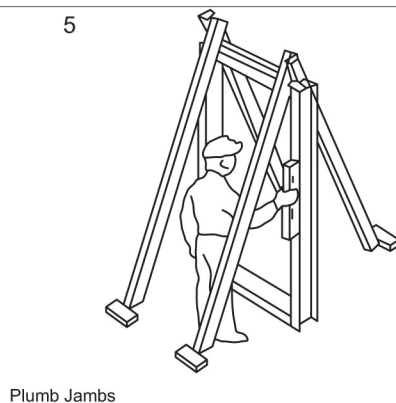


6

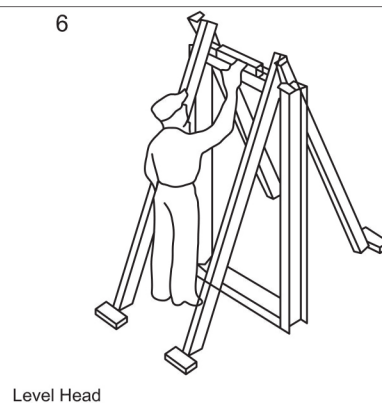

7

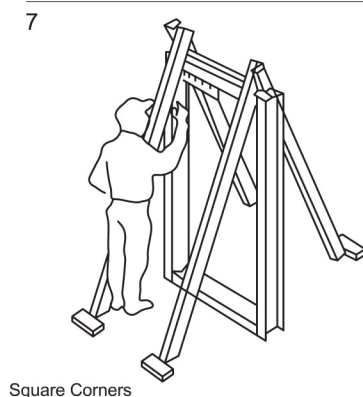

8

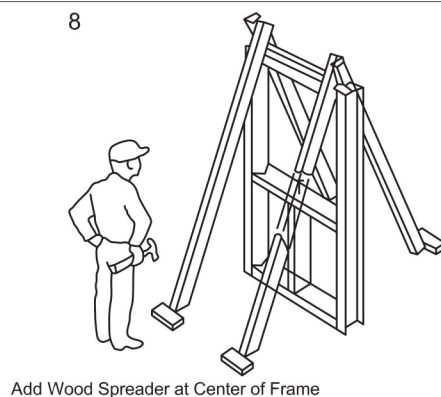

9

